

## Recommended printer driver settings for photo-realistic prints

If you can't find your printer in the list below, please consult us at

Phone.: ++49 (0)40 - 521 45 333 • Fax: ++49 (0)40 - 521 45 132 • eMail: [technicalservice@tetenal.com](mailto:technicalservice@tetenal.com)

	HP			Canon		Epson							Lexmark
	6xx, 7xx, 850C, 870C	812, 840C, 880, 89x	970Cxi, 930C, 950C, Photo Smart 1xxx 1220C	4xxx, 5xxx, 6xxx, 7xxx*	8200	400, 600, 800, 1520	640, 740, 760, 860	900	Photo, Photo 700, Photo EX	Photo 750, 1200	Photo 870, 875, 1270	2000P	Z51
<b>Perfect Print Paper 120 g</b>	Ink jet paper; best print quality	HP Ink jet paper; print quality „high“	HP Ink jet paper; print quality „optimal“	Print model: photo	high resolution paper	Photo Quality Ink Jet Paper; 720/1440 dpi**	Photo Paper 1440 dpi	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 720/1440 dpi**	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 1440 dpi	Archival Matte Paper, Foto	coated paper; 1200 dpi
<b>Duo Print Paper 130 g</b>	Ink jet paper; best print quality	HP Ink jet paper; print quality „high“	HP Ink jet paper; print quality „optimal“	Print model: photo	high resolution paper	Photo Quality Ink Jet Paper; 720/1440 dpi**	Photo Paper 1440 dpi	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 720/1440 dpi**	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 1440 dpi	Archival Matte Paper, Foto	coated paper; 1200 dpi
<b>Glossy Paper 160 g</b>	Glossy paper best print quality	HP Photo paper; print quality „high“	HP Photo paper; print quality „optimal“	Print model: photo	Photo-/Glossy Paper; Print modell: Super photo	Glossy Paper 720/1440 dpi**	Photo Paper 1440 dpi	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 720/1440 dpi**	Photo Paper 1440 dpi	Premium Glossy Photo Paper 1440 dpi	Glossy Paper Foto weight, Foto	Glossy/Photo Paper 1200 dpi; „natural colours“
<b>High Glossy Paper DC 210 g</b>	Glossy paper best print quality	HP Photo paper; print quality „high“	HP Photo paper; print quality „optimal“	Print model: photo	Photo-/Glossy Paper; Print modell: Super photo	Glossy Paper 720/1440 dpi**	Photo Paper 1440 dpi	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 720/1440 dpi**	Photo Paper 1440 dpi	Premium Glossy Photo Paper 1440 dpi	Glossy Paper Foto weight, Foto	Glossy/Photo Paper 1200 dpi; „natural colours“
<b>High Glossy Paper Special 264 g</b>	Glossy paper best print quality	HP Photo paper; print quality „high“	HP Photo paper; print quality „optimal“	Print model: photo	Photo-/Glossy Paper; Print modell: Super photo	Glossy Film 720/1440 dpi**	Glossy Film 1440 dpi brightness -5	Glossy Film 1440 dpi	Glossy Film 720/1440 dpi**	Glossy Film 1440 dpi** photo-realistisch; Magenta -10	Premium Glossy Photo Paper 1440 dpi	Glossy Paper Foto weight, Foto	Glossy/Photo Paper 1200 dpi; „natural colours“
<b>Portrait Paper 240 g</b>	Glossy paper best print quality	HP Photo paper; print quality „high“	HP Photo paper; print quality „optimal“	Print model: photo	Photo-/Glossy Paper; Print modell: Super photo	Glossy Film 720/1440 dpi**	Glossy Film 1440 dpi photo realistic	Glossy Film 1440 dpi	Glossy Film 720/1440 dpi**	Glossy Film 1440 dpi	Premium Glossy Photo Paper 1440 dpi	Premium Semigloss Foto Paper, Foto	not suitable
<b>Aquarell Paper 230 g</b>	Glossy paper best print quality	HP Photo paper; print quality „high“	HP Photo paper; print quality „optimal“	Print model: photo	Photo-/Glossy Paper; Print modell: Super photo	Photo Quality Ink Jet Paper; 720/1440 dpi**	Photo Paper 1440 dpi	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 720/1440 dpi**	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 1440 dpi	Premium Semigloss Foto Paper, Foto	
<b>Canvas Textile</b>	Glossy paper best print quality	HP Photo paper; print quality „high“	HP Photo paper; print quality „optimal“	Print model: photo	Photo-/Glossy Paper; Print modell: Super photo	Photo Quality Ink Jet Paper; 720/1440 dpi**	Photo Paper 1440 dpi	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 720/1440 dpi**	Photo Paper 1440 dpi	Photo Quality Ink Jet Paper 1440 dpi	Premium Semigloss Foto Paper, Foto	

\* When using photo cartridges please select print model „Super Photo“ instead of „Photo“ \*\* Use these with your printer at maximum resolution

### Tips

- Allow ink jet prints to dry completely. Drying is particularly important if the print is to be stapled or stored in folders. If the print is not completely dry it can lead to the printed side of one sheet sticking to the reverse of another.
- Labelling of paper should only be done with pens, which have previously been tested for their suitability.
- The Glossy Film setting should definitely be retained, otherwise colour distortion or a lack of definition may occur. These distortions do not appear until later! Increasing the level of saturation increases the risk of distortion.
- In order to increase the storage stability of the High Glossy Paper Special 264 g/m<sup>2</sup> cover the printed side with a piece of paper.

All company names are protected trade-names belonging to the respective company.